



**SERVICE MENU HYUNDAI HD65/72**

MINOR SERVICE			MEDIUM SERVICE			MAJOR SERVICE			MAJOR SERVICE PLUS		
SERVICE 5 000/15000/25000... KM	PRICE		SERVICE 10 000/30000/50000... KM	PRICE		SERVICE 20 000/60000/100000... KM	PRICE		SERVICE 40 000/80000 KM(PLUS)	PRICE	
<b>Parts required</b>	<b>Qty</b>		<b>Parts required</b>	<b>Qty</b>		<b>Parts required</b>	<b>Qty</b>		<b>Parts required</b>	<b>Qty</b>	
Oil filter element	1	1,520.00	Oil filter element	1	1,520.00	Oil filter element	1	1,520.00	Oil filter element	1	1,520.00
Diesel filter element	0	-	Diesel filter element	0	-	Diesel filter element	1	1,007.44	Diesel filter element	1	1,007.44
Air filter element	0	-	Air filter element	0	-	Air filter element	1	4,125.13	Air filter element	1	4,125.13
Drive belt power steering pump	0	-	Drive belt power steering pump	0	-	Drive belt power steering pump	0	-	Drive belt power steering pump	1	997.01
valve cover gasket	0	-	valve cover gasket	0	-	Valve cover gasket	0	-	Valve cover gasket	1	578.40
oil seal(front hub)	0	-	oil seal(front hub)	0	-	oil seal(front hub)	0	-	oil seal(front hub)	2	364.82
oil seal(inner)	0	-	oil seal(inner)	0	-	oil seal(inner)	0	-	oil seal(inner)	2	508.86
oil seal (outer)	0	-	oil seal (outer)	0	-	oil seal (outer)	0	-	oil seal (outer)	2	505.58
<b>Lubricants required</b>	<b>Qty</b>		<b>Lubricants required</b>	<b>Qty</b>		<b>Lubricants required</b>	<b>Qty</b>		<b>Lubricants required</b>	<b>Qty</b>	
Engine Oil	9.5	3,600.00	Engine Oil	9.5	3,600.00	Engine Oil	9.5	3,600.00	Engine Oil	9.5	3,600.00
Rear axle oil	0	-	Rear axle oil	0	-	Rear axle oil	0	-	Rear axle oil	4.5	1,084.50
ATF/Power Steering Oil	0	-	ATF/Power Steering Oil	0	-	ATF/Power Steering Oil	0	-	ATF/Power Steering Oil	1.5	522.46
Grease	0.5	256.54	Grease	0.5	256.54	Grease	1	513.08	Grease	1	513.08
Gearbox oil	0	-	Gearbox oil	0	-	Gearbox oil	0	-	Gearbox oil	4	1,069.20
Coolant	0	-	Coolant	0	-	Coolant	0	-	Coolant	5	2,550.86
Parts		1,520.00	Parts		1,520.00	Parts		6,652.57	Parts		9,607.24
Lubricants		3,856.54	Lubricants		3,856.54	Lubricants		4,113.08	Lubricants		9,340.10
Labour	1.5	3,460.00	Labour	2.5	3,775.00	Labour	3.5	8,085.00	Labour	5	11,550.00
Consumables	12.50%	432.50	Consumables	12.50%	721.87	Consumables	12.50%	1,010.62	Consumables	12.50%	1,443.75
Vat	16%	1,483.05	Vat	16%	1,899.75	Vat	16%	3,177.80	Vat	16%	5,110.57
Grand total		10,752.09	Grand total		13,773.16	Grand total		23,039.07	Grand total		37051.66
Round off Total		11,000.00	Round off Total		14,000.00	Round off Total		23,000.00	Round off Total		37,000.00

**WORKSCOPE**

**WORKSCOPE**

**WORKSCOPE**

**WORKSCOPE**

Replace or lubricate		Replace or lubricate		Replace or lubricate		Replace or lubricate	
Engine oil and filter	X	Engine oil and filter	x	Engine oil and filter	x	Engine oil and filter	x
Diesel Filter		Diesel Filter		Diesel Filter	x	Diesel Filter	x
Grease as required	X	Grease as required	x	Grease as required	x	Grease as required	x
Air filter element		Air filter element	x	Air filter element	x	Air filter element	x
<b>Check and top up (Add Cost)</b>		<b>Check and top up (Add Cost)</b>		<b>Check and top up (Add Cost)</b>		<b>Check and top up (Add Cost)</b>	
Gearbox oil	X	Gearbox oil	x	Gearbox oil	x	Gearbox oil	
Differential oil	x	Differential oil	x	Differential oil	x	Differential oil	
Clutch fluid	x	Clutch fluid	x	Clutch fluid	x	Clutch fluid	x
Power steering fluid	x	Power steering fluid	x	Power steering fluid	x	Power steering fluid	x
Tyre pressures	x	Tyre pressures	x	Tyre pressures	x	Tyre pressures	x
Battery electrolyte as required	x	Battery electrolyte as required	x	Battery electrolyte as required	x	Battery electrolyte as required	x

<b>Check and clean</b>		<b>Check and clean</b>		<b>Check and clean</b>		<b>Check and clean</b>	
Engine breather system if applicable		Engine breather system if applicable	X	Engine breather system if applicable	X	Engine breather system if applicable	X
Clean Battery terminals & tighten		Clean Battery terminals & tighten		Clean Battery terminals & tighten	X	Clean Battery terminals & tighten	X
<b>Visually Check and tighten</b>		<b>Visually Check and tighten</b>		<b>Visually Check and tighten</b>		<b>Visually Check and tighten</b>	
All fuel lines hoses and Connections	X	All fuel lines hoses and connections	x	All fuel lines hoses and connections	x	All fuel lines hoses and	x
Cooling System	X	Cooling System	x	Cooling System	x	Cooling System	x
Suspension system	X	Suspension system	x	Suspension system	x	Suspension system	x
'V' belt.	X	'V' belt.	x	'V' belt.	x	'V' belt.	x
<b>Check vehicle electrics for faults prepare estimate for repair cost</b>		<b>Check vehicle electrics for faults prepare estimate for repair</b>		<b>Check vehicle electrics for faults prepare estimate for repair</b>		<b>Check vehicle electrics for faults prepare estimate for repair</b>	
Check operation and condition of external lights	x	Check operation and condition of external lights	x	Check operation and condition of external lights	x	Check operation and condition of external lights	x
Check operation of warning lights	x	Check operation of warning lights	x	Check operation of warning lights	x	Check operation of warning lights	x
Check operation of interior lights	x	Check operation of interior lights	x	Check operation of interior lights	x	Check operation of interior lights	x
Check operation of electrical switches	x	Check operation of electrical switches	x	Check operation of electrical switches	x	Check operation of electrical switches	x
Check condition of visible wiring harness	x	Check condition of visible wiring harness	x	Check condition of visible wiring harness	x	Check condition of visible wiring harness	x
check the condition of the dashboard light and switches	x	check the condition of the dashboard light and switches	x	check the condition of the dashboard light and switches	x	check the condition of the dashboard light and switches	x
<b>General vehicle check up</b>		<b>General vehicle check up</b>		<b>General vehicle check up</b>		<b>General vehicle check up</b>	
Check the parking brake condition	x	Check the parking brake condition	x	Check the parking brake condition	x	Check the parking brake condition	x
check brake system for leakage		check brake system for leakage		check brake system for leakage	X	check brake system for leakage	x
inspect the brake pedal free-play		inspect the brake pedal free-play	x	inspect the brake pedal free-play	x	inspect the brake pedal free-play	x
inspect the brake lining and drum condition		inspect the brake lining and drum condition	X	inspect the brake lining and drum condition	x	inspect the brake lining and drum condition	X
inspect the steering system for leaks		inspect the steering system for leaks	x	inspect the steering system for leaks	x	inspect the steering system for leaks	X
inspect power steering pump for unusual noise		inspect power steering pump for unusual noise	x	inspect power steering pump for unusual noise	x	inspect power steering pump for unusual noise	x
check the transmission lever for looseness		check the transmission lever for looseness	x	check the transmission lever for looseness	x	check the transmission lever for looseness	x
check the propeller coupling condition		check the propeller coupling condition		check the propeller coupling condition	x	check the propeller coupling condition	x
check front and rear axle for leakage		check front and rear axle for leakage	x	check front and rear axle for leakage	x	check front and rear axle for leakage	x
check the front and rear wheel hub bearing		check the front and rear wheel hub bearing		check the front and rear wheel hub bearing	x	check the front and rear wheel hub bearing	x
check the drive belt tension and condition	X	check the drive belt tension and condition	x	check the drive belt tension and condition	x	check the drive belt tension and condition	x
check the shock absorbers condition		check the shock absorbers condition	x	check the shock absorbers condition	x	check the shock absorbers condition	x
check the spring bushes and shackle		check the spring bushes and shackle	x	check the spring bushes and shackle	x	check the spring bushes and shackle	x
inspect the chassis -cab mounting bolts		inspect the chassis -cab mounting bolts	x	inspect the chassis -cab mounting bolts	x	inspect the chassis -cab mounting bolts	x
inspect the u-bolt condition		inspect the u-bolt condition	x	inspect the u-bolt condition	x	inspect the u-bolt condition	x
steering wheel free play and link	X	steering wheel free play and link	x	steering wheel free play and link	x	steering wheel free play and link	x
radiator and thermostat condition		radiator and thermostat condition		radiator and thermostat condition		radiator and thermostat condition	x
check the injection pump pressure		check the injection pump pressure		check the injection pump pressure	x	check the injection pump pressure	x
Check for excessive play in front and rear wheel bearings.		Check for excessive play in front and rear wheel bearings.		Check for excessive play in front and rear wheel	x	Check for excessive play in front and rear wheel	x
Inspect the exhaust gas		Inspect the exhaust gas	x	Inspect the exhaust gas	x	Inspect the exhaust gas	x
<b>CHECK AND ADJUST/TIGHTEN</b>		<b>CHECK AND ADJUST/TIGHTEN</b>		<b>CHECK AND ADJUST/TIGHTEN</b>		<b>CHECK AND ADJUST/TIGHTEN</b>	
Engine valve clearance		Engine valve clearance		Engine valve clearance	x	Engine valve clearance	x
Front and rear wheel bearing free play		Front and rear wheel bearings free play		Front and rear wheel bearings free play		Front and rear wheel bearings free play	x
Strip, clean, re grease and reseal front and rear wheel bearings		Strip, clean, re grease and reseal front and rear wheel bearings		Strip, clean, re grease and reseal front and rear wheel bearings		Strip, clean, re grease and reseal front and rear w	x
injection pressure and injection condition of nozzle		injection pressure and injection condition of nozzle		injection pressure and injection condition of nozzle	x	injection pressure and injection condition of nozzle	x
injection timing		injection timing		injection timing	x	injection timing	x
The cylinder head bolts		The cylinder head bolts		The cylinder head bolts		The cylinder head bolts	x
Wheel studs and bolts	X	Wheel studs and bolts	x	Wheel studs and bolts	x	Wheel studs and bolts	x